

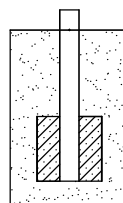
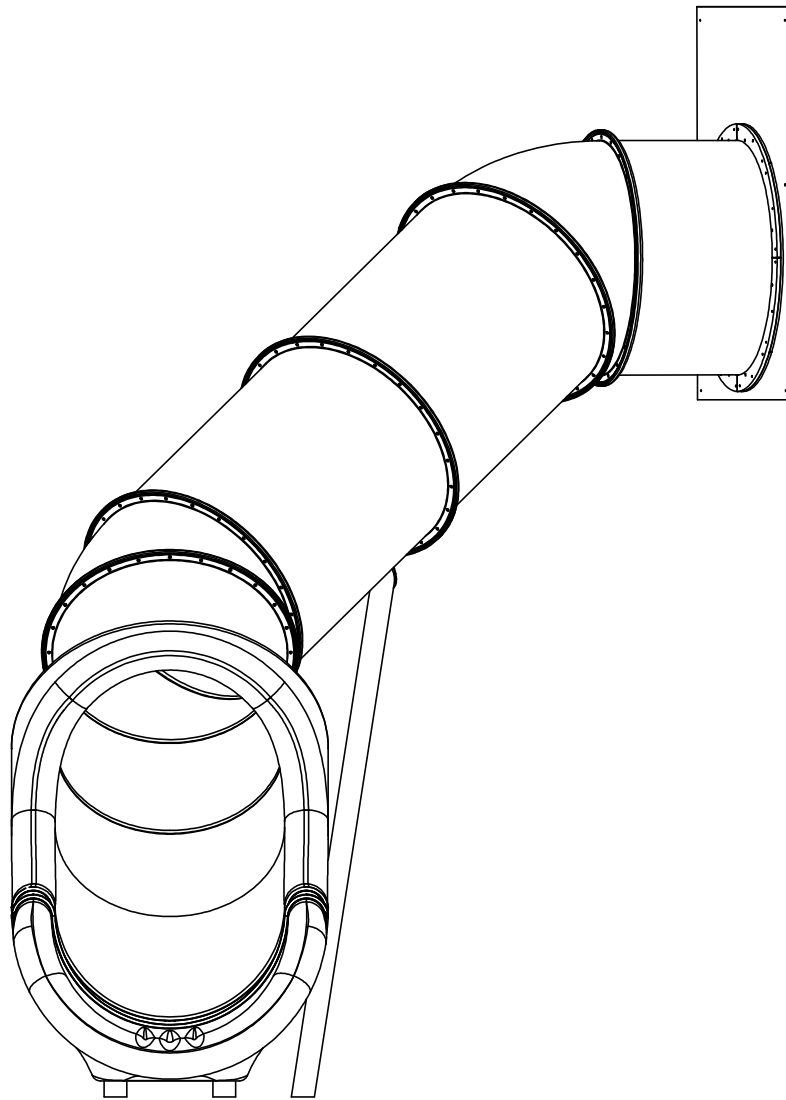
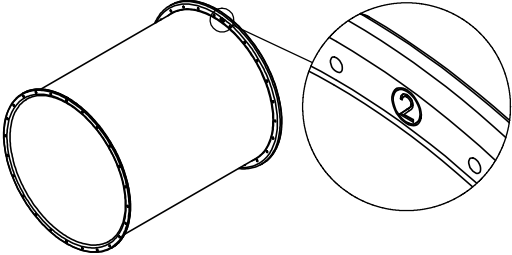
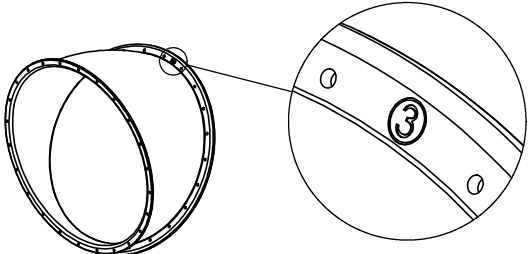
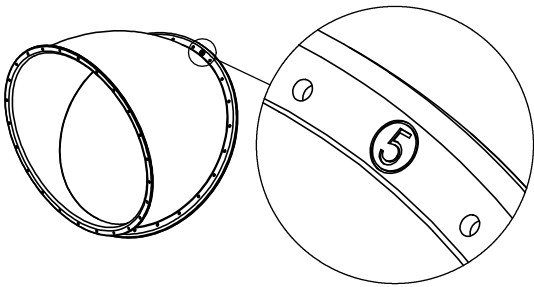
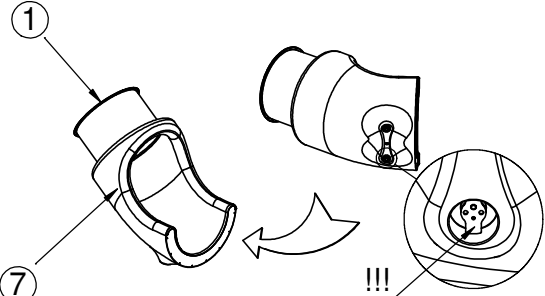
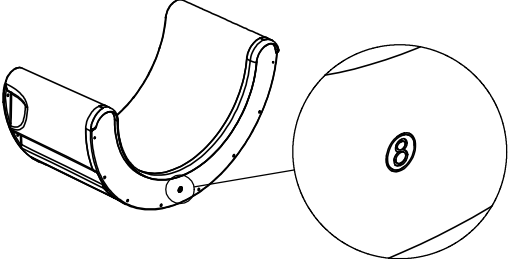
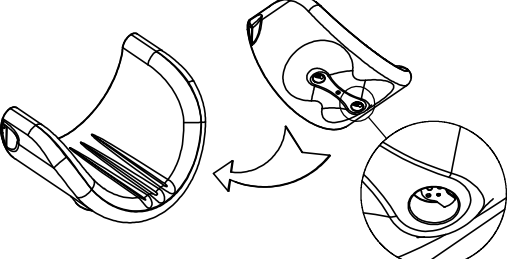



MTSL_H240_152231789

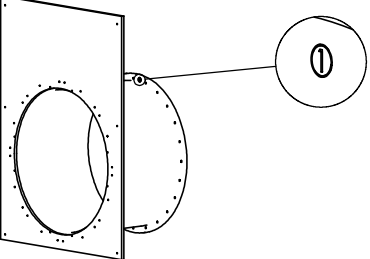


MTSL_H240_152231789N


 
 


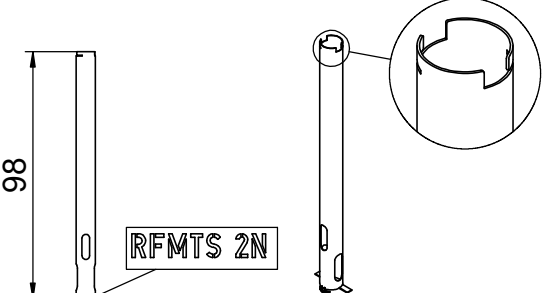

 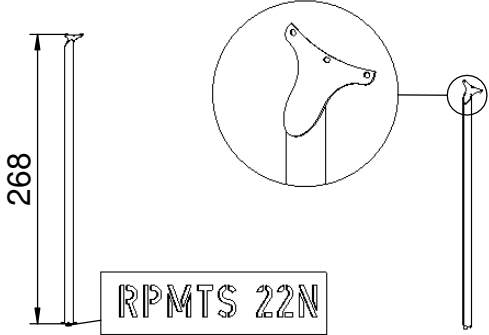

 
NR	ELEMENT	MTSL_H240_152231789N
1		
2		2
3		1
4		
5		1
6		

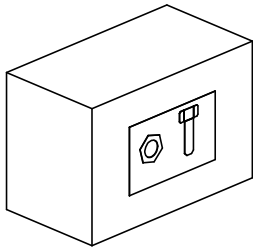
NR	ELEMENT	MTSL_H240_152231789N
7		1
8		1
9		1
10		1
11		4
12		

NR	ELEMENT	MTSL_H240_152231789N
13		1



MTSL_H240_152231789N

Nr	Element			Σ
10		DIN 9021	6x18	256
15		ISO 7380	M6x30	120
16		-	K1_d21_B	136
17		-	Z1_d21_B	136
18		DIN 985	M6 (OC)	120
21		DIN 125	8x16	6
43		DIN 1587	M8	3
45		ISO 7380	M8x30	3
58		-	LOCTITE	1
472		DIN 933	M6x25 (OC)	16



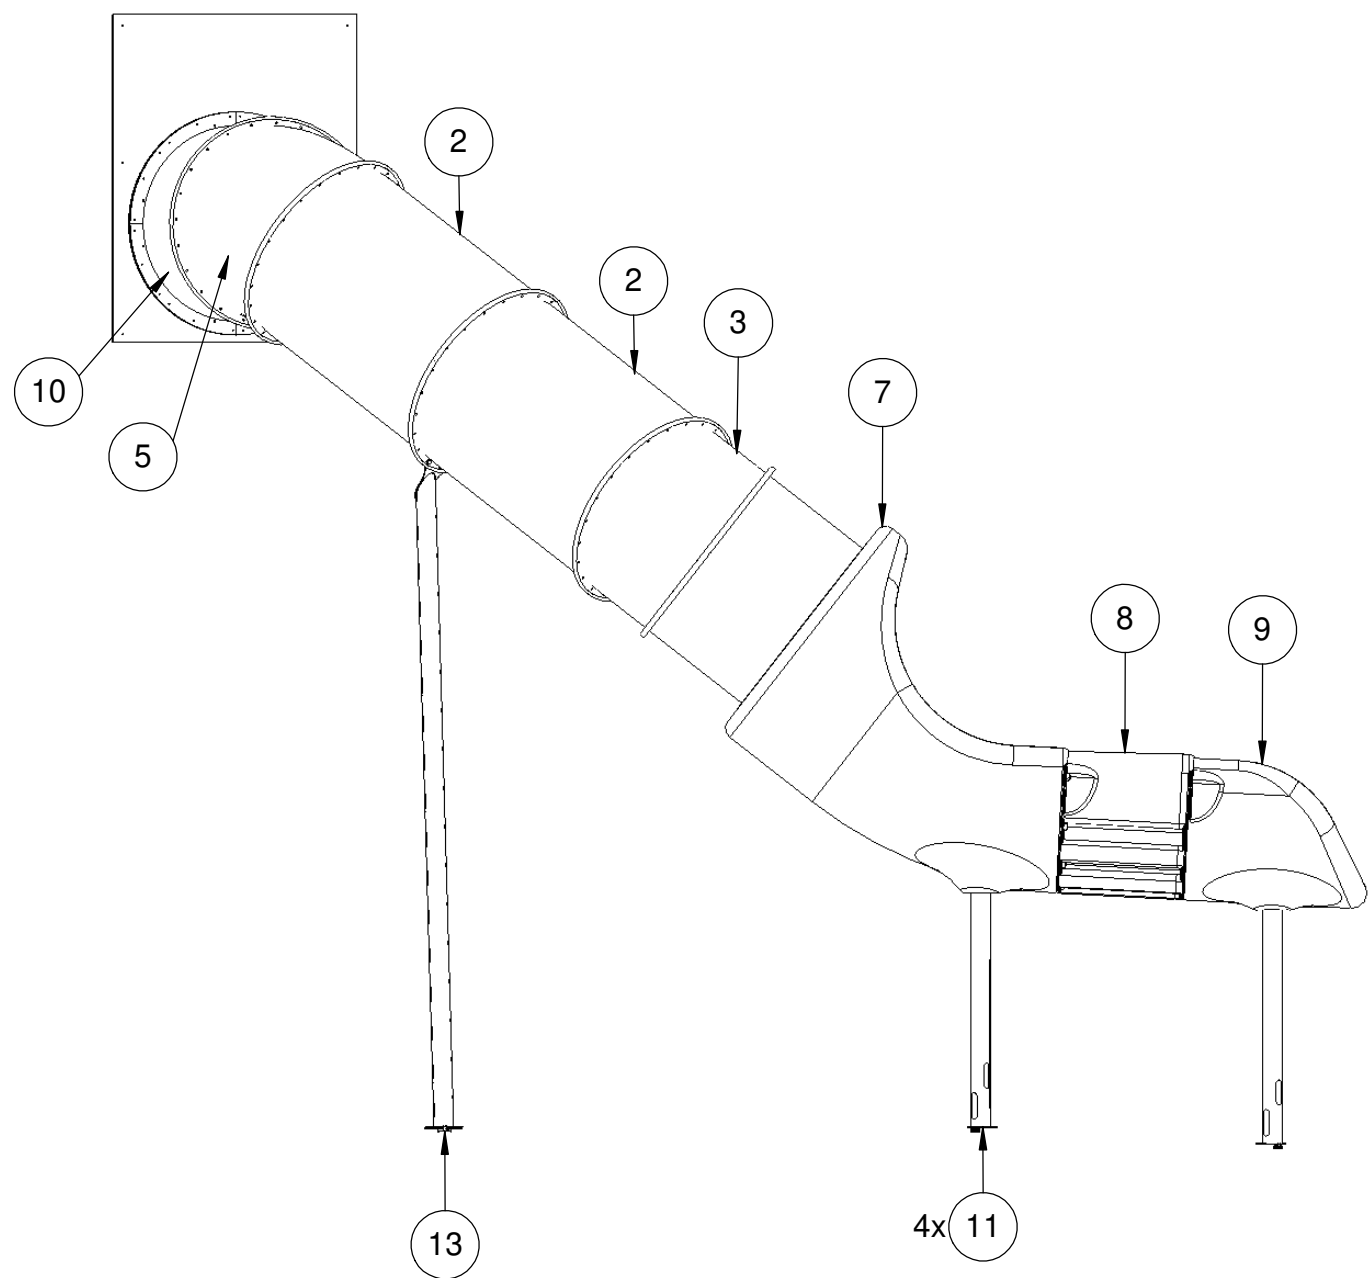


1

MTSL_H240_152231789N



INST_MTS_2
INST_MTS_3
INST_MTS_4
INST_MTS_5
INST_MTS_11

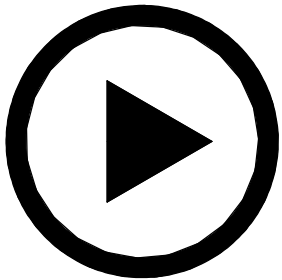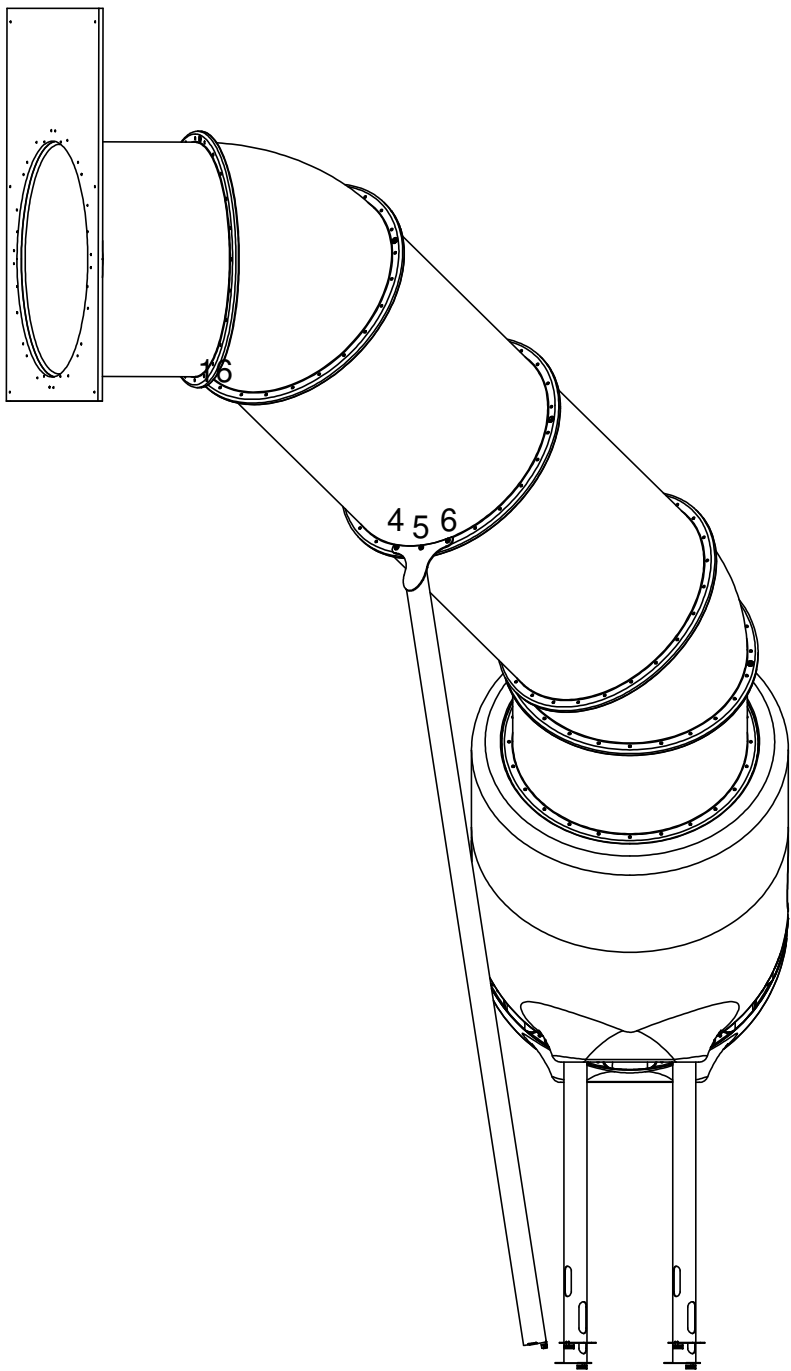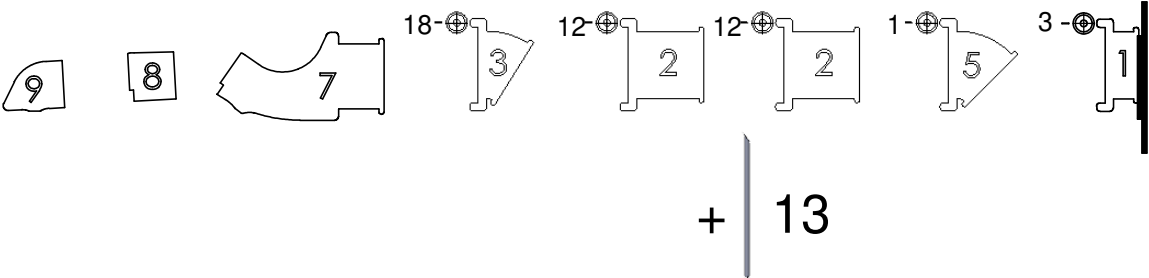

buglo.pl/mts-manual

MANUAL