
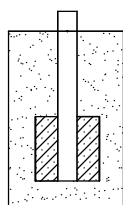


MTSS_H270_2455555551789

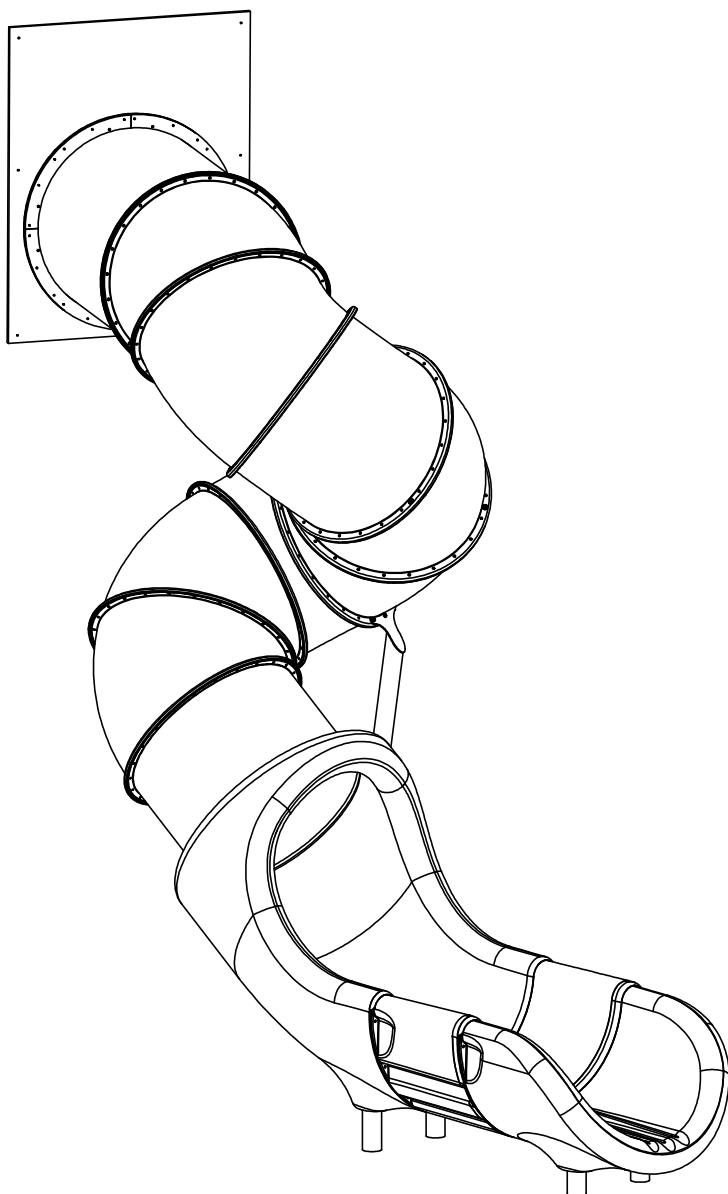

MTSS_H270_2455555551789 N

NR	ELEMENT	
----	---------	--


MTSS_H270_2455555551789 N

1

2


3

4

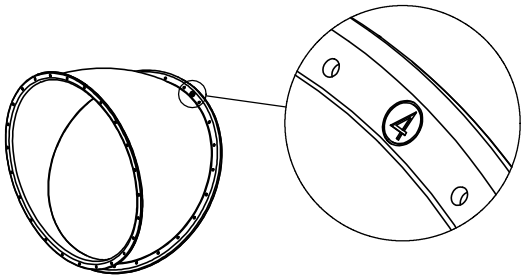







1


5

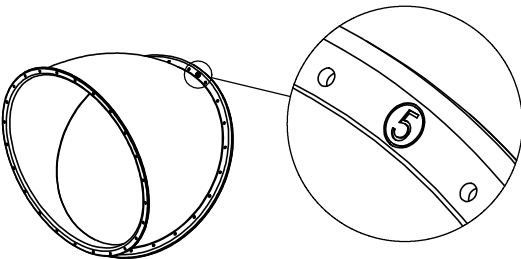


 
 


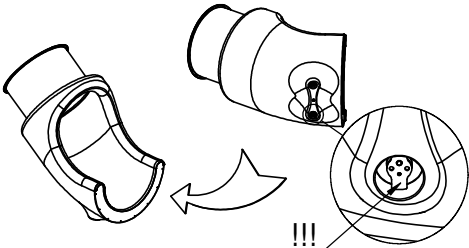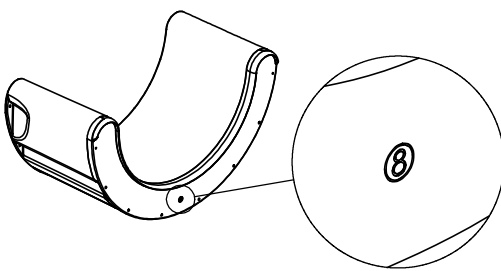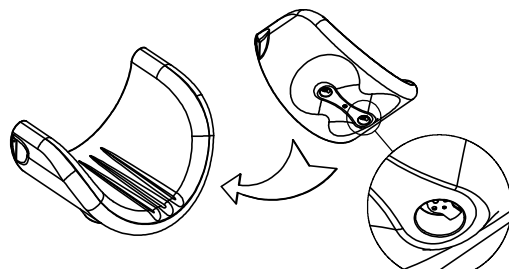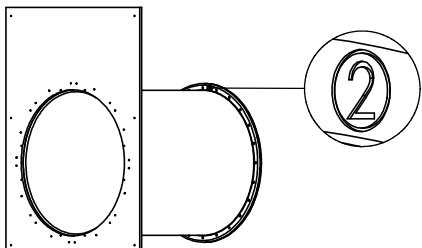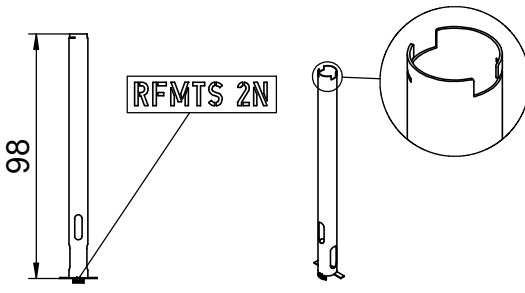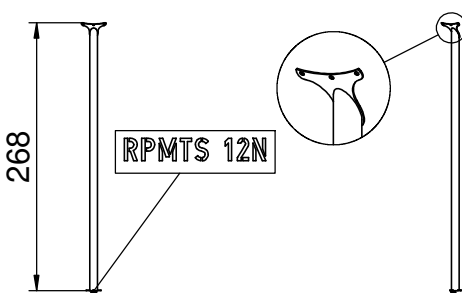

 

 
7

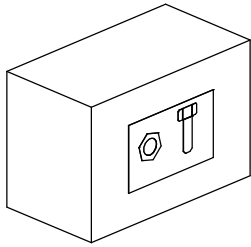
6

NR	ELEMENT	MTSS_H270_2455555551789 N
7		1
8		1
9		1
10		1
11		4
12		1



MTSS_H270_2455555551789 N

Nr	Element			Σ
10		DIN 9021	6x18	448
15		ISO 7380	M6x30	216
16		-	K1_d21_B	232
17		-	Z1_d21_B	232
18		DIN 985	M6 (OC)	216
21		DIN 125	8x16	6
43		DIN 1587	M8	3
45		ISO 7380	M8x30	3
58		-	LOCTITE	1
472		DIN 933	M6x25 (OC)	16

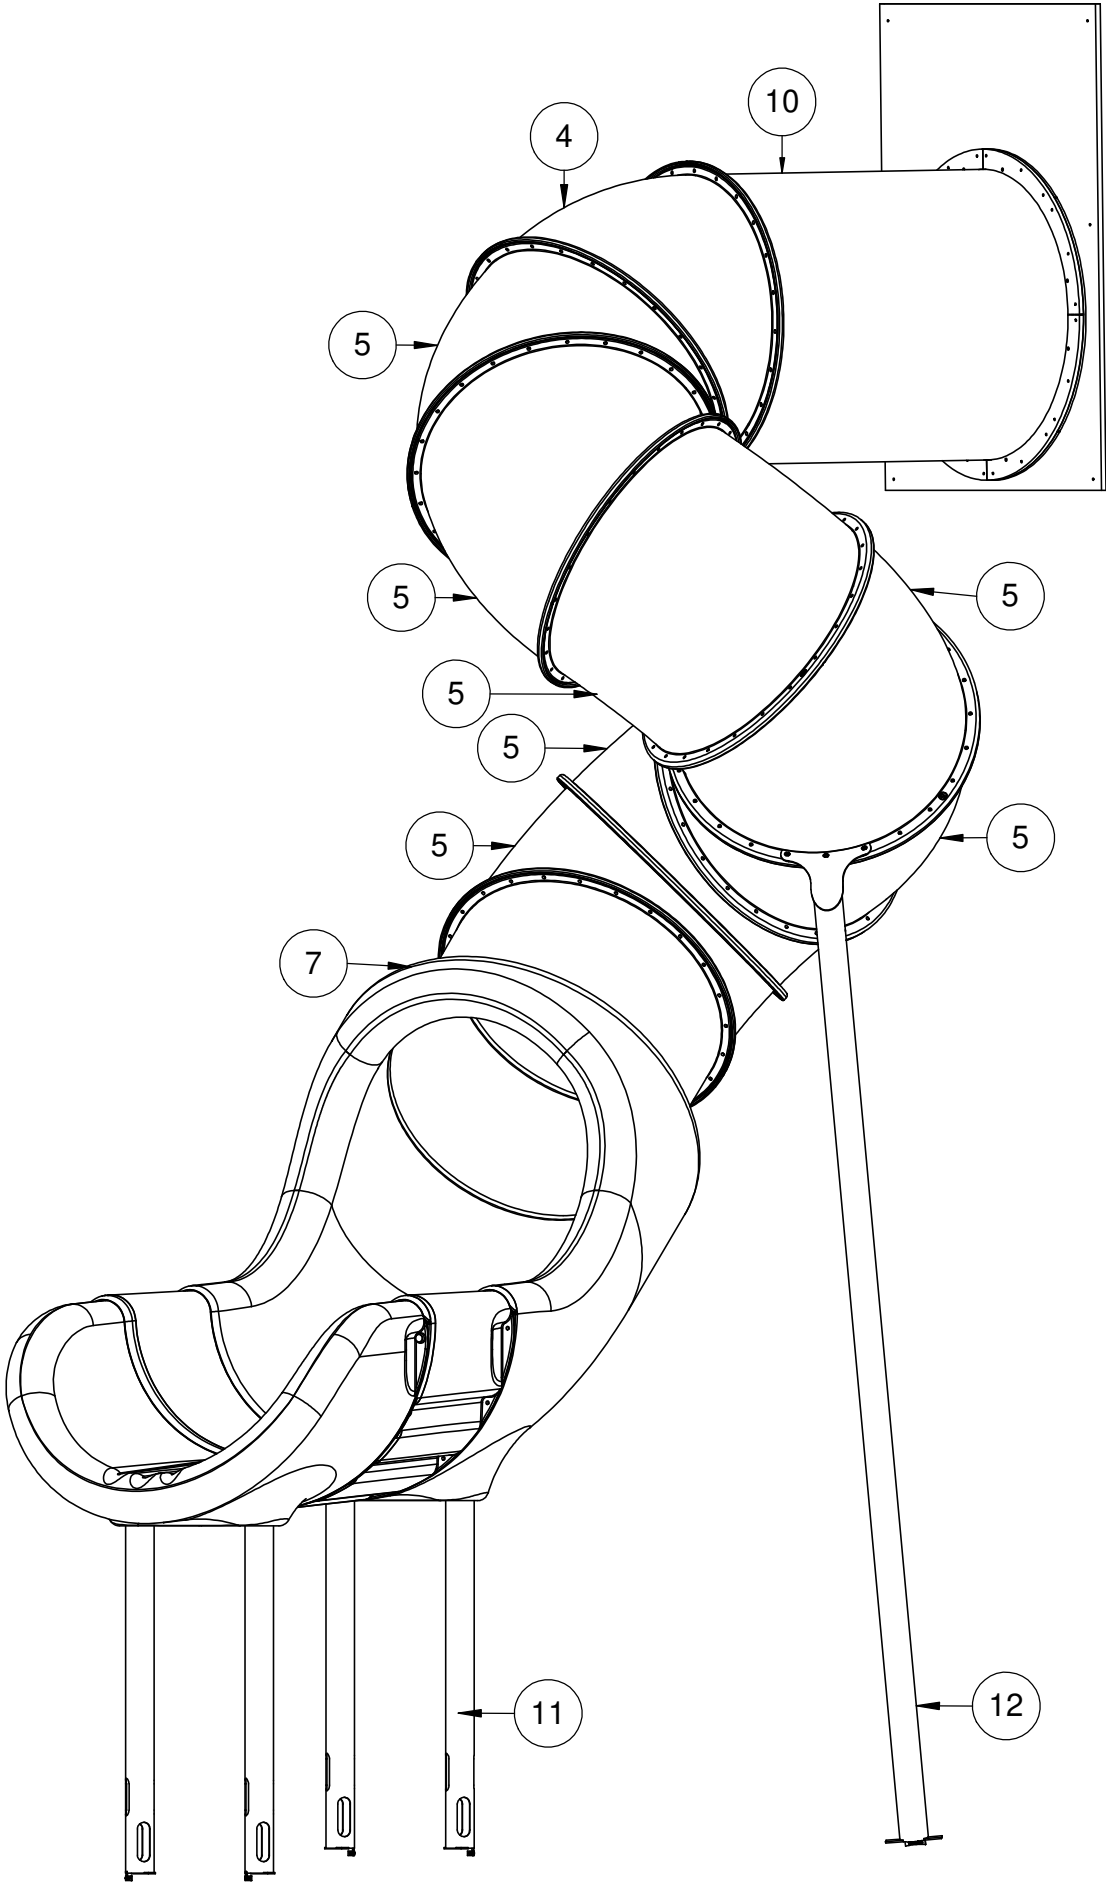


1



MTSS_H270_2455555551789 N



INST_MTS_2
INST_MTS_3
INST_MTS_4
INST_MTS_5
INST_MTS_11

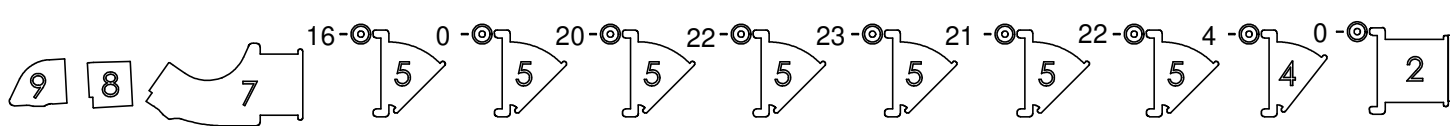

+

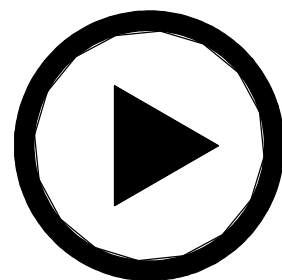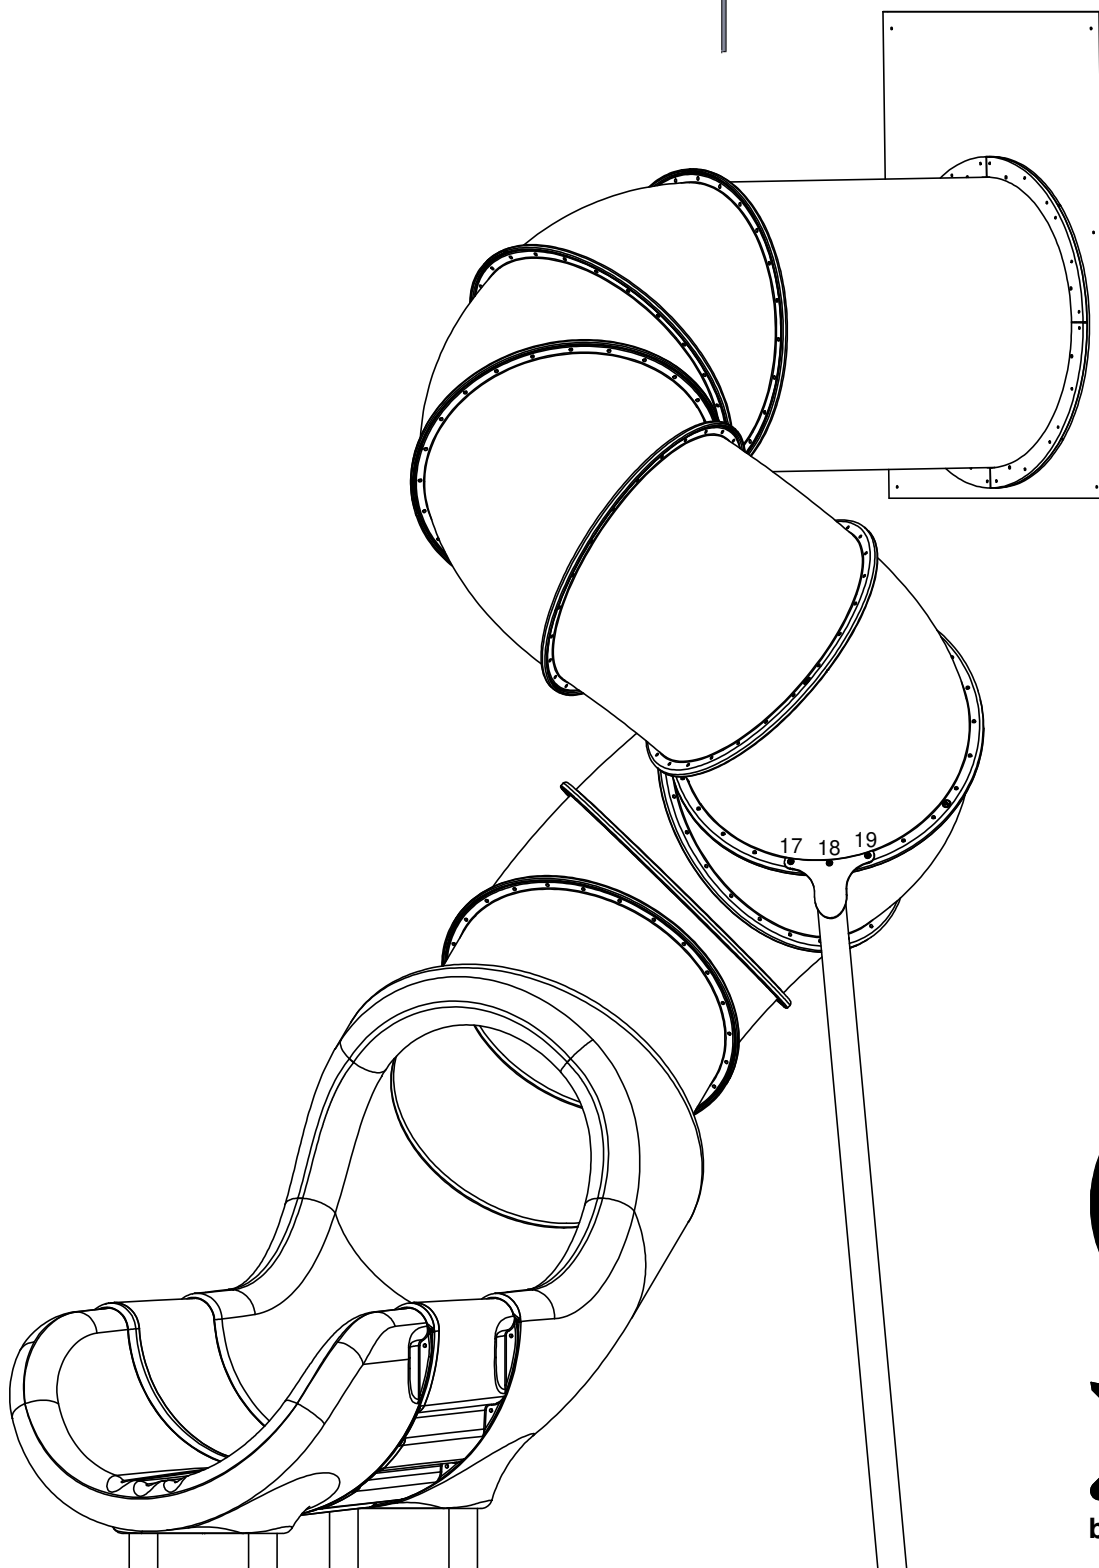

buglo.pl/mts-manual

MANUAL